

## **RE-LEARNING RECEIVER BOX TO WIRELESS WALL THERMOSTAT**

1. Turn everything off except the power point.
2. A) Two Switches from Heater Off  
B) Handset Off  
C) Red Button Off
3. Pull front panel down below door.  
You will see a black receiver box either to the left or right of the convection fan. The receiver box will have two black wires, a red wire and a blue wire going to it.
4. If you look on top of the receiver box there is a hole that says "LEARN" above it.
5. Press and release the "LEARN" button with a pen so it beeps.
6. Once the receiver box beeps press the "MODE" button on the wireless wall thermostat.
7. When you release the "MODE" button the receiver box should do 6 very quick beeps. This means the receiver box is now talking to the wireless wall thermostat. If you don't get the 6 beeps you will need to press the "LEARN" button again.
8. Go through the modes until it says "OFF" on the screen.
9. Carefully put the front panel back on. Be careful not to squash any of the wires.
10. Turn the switches "ON" on the front of the heater.
11. Press the "MODE" button on the remote and the heater should now turn on via the thermostat.

If you don't get ignition via the thermostat the following steps should be followed:

1. Turn everything off except the power point.
2. Pull the front panel down below the door.
3. The black receiver box has a switch on top of it: ON REMOTE OFF  
The receiver box will be in the REMOTE position.
4. Flick the switch to the ON position on the receiver box.  
The heater will now work manually bypassing the thermostat.

## **BLUE TOUCH SCREEN PROGRAMMABLE REMOTE CONTROL THERMOSTAT – STEP BY STEP INSTRUCTIONS**

1. Turn both switches on the front panel of the heater to the “ON” position. (Put both switches down). Ensure the red button is **not** illuminated.
  
2. Press the “MODE” button on the front of the remote control thermostat. It will go through the following sequences:
  - Press mode button once – ON
  - Press mode button twice – ON THERMO
  - Press mode button three times – OFF

If the customer just wants to run the heater they turn the remote to “ON”. The temperature of the room will be on the screen of the remote only.

If the remote control is turned to “ON THERMO” then the customer can set a desired temperature. The room temperature is the first temperature on the screen. The set temperature is the second temperature on the screen. This temperature can be adjusted by touching the “UP and DOWN” arrows on the screen.

Obviously if the customer wants the heater off then the “MODE” button needs to be pressed until “OFF” appears on the screen.

If the customer prefers to turn the switches off at the heater they **must** remember to turn the switches back on prior to using the heater again and before turning the remote on. If this is not done the heater will get confused and won't turn on. You will then have to reset the heater (Refer to Installation and Operating Instructions Manual Page 40).

**Please Note:** The heater cannot be operated manually by just using the switches when a remote control is installed.

Refer to page 21 of the Installation and Operating Instruction Manual for a detailed explanation of what the red button is used for.